


KIOTI TRACTOR WORKSHOP MANUAL

DK35 SE/DK40(C)SE/DK45(C)SE

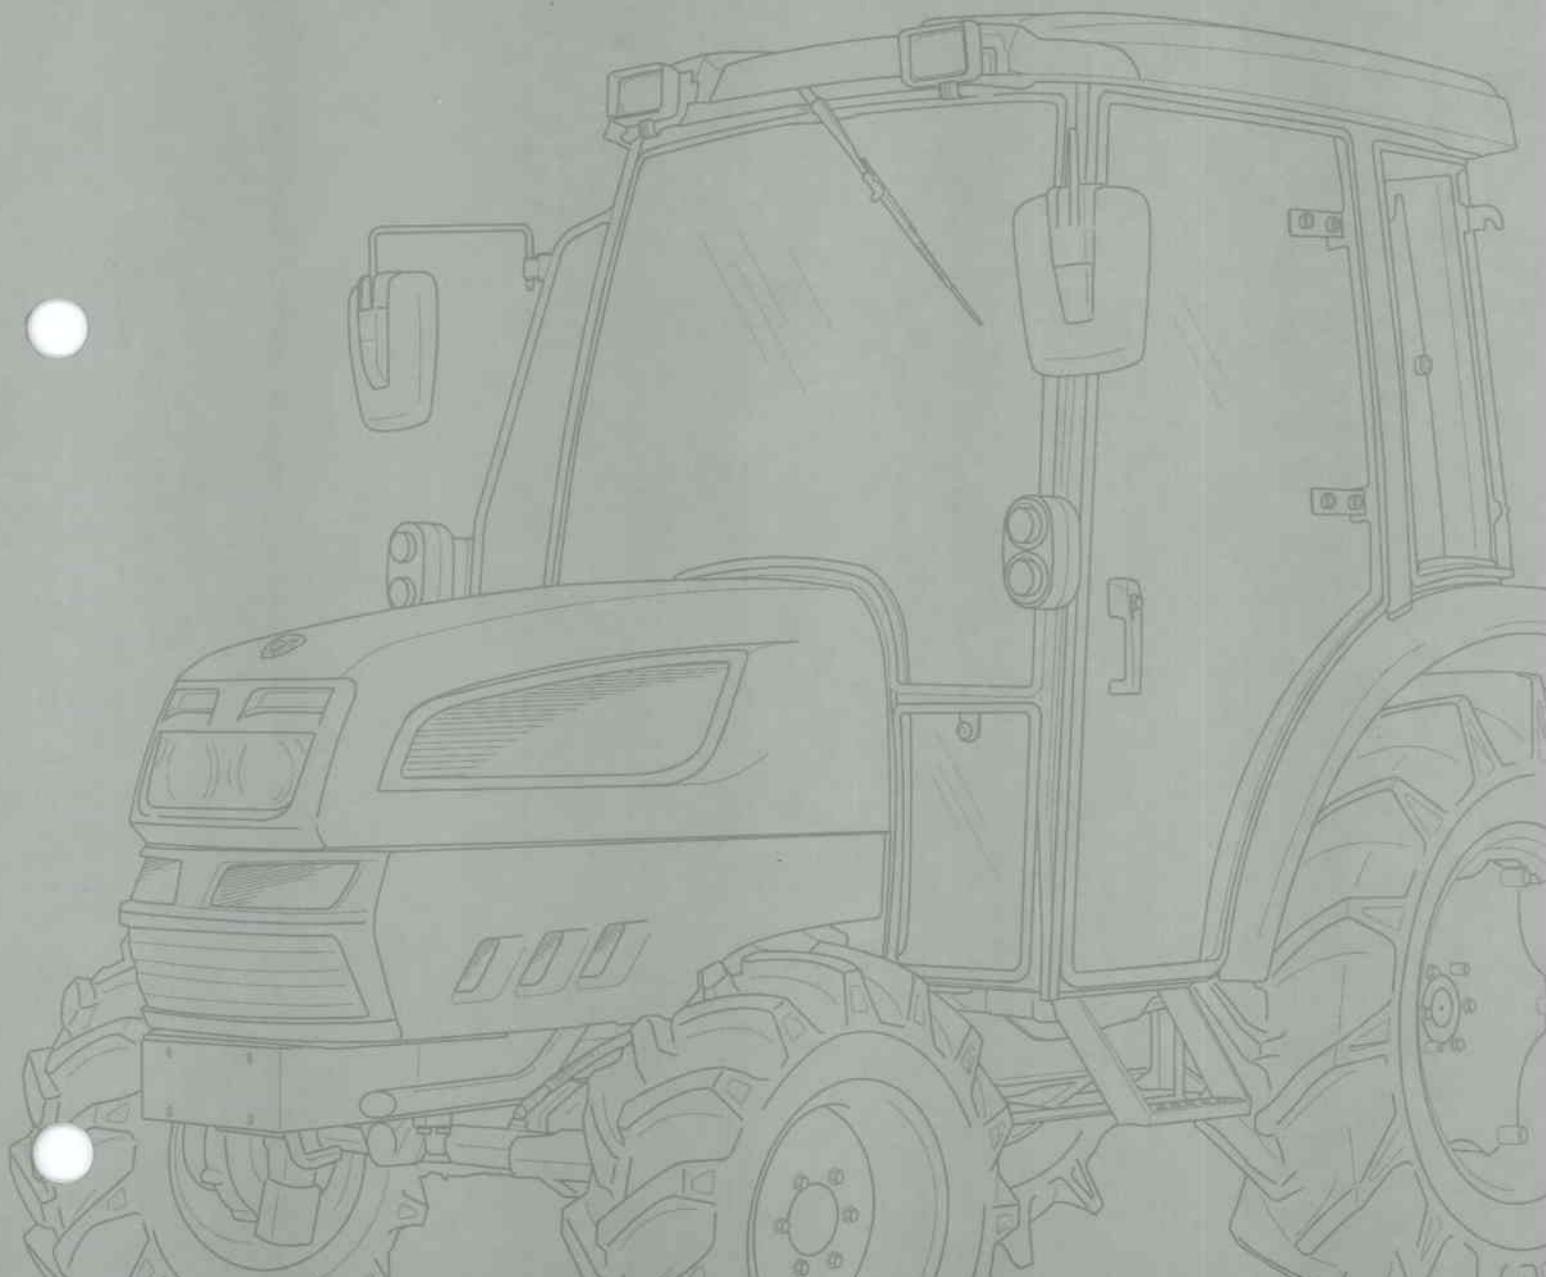

PREFACE

This manual is to provide servicing personnel with information on the general specifications, service, operating principle, troubleshooting, exploded view including part name, removing and installing procedures for DK35SE, DK40(C)SE and DK45(C)SE tractors with high-end technology.

All information in this manual is based on the latest product information available at the time of publication. Therefore, some of the information in this manual may differ from the machine you have.

KIOTI has a principle to apply update to the next edition of the manual if there is any. However, **KIOTI** has no obligation to modify the contents in this manual, especially the contents in the manual which is already distributed or published.

The modified information is available in **KIOTI's** online electronic manual system (DEMSS).

This manual is ultimately to satisfy customers with best performance of tractor. If there is any typo, wrong information or question for this manual, feel free to contact **KIOTI**.

2008. 07

service division

DAEDONG INDUSTRIAL Co., Ltd.

IMPORTANT

- Using unspecified parts, fuel and lubricants other than **KIOTI's** genuine parts can damage the tractor and such damage will not be covered by warranty.

REMARK

- We reserve the right to make changes throughout the entire manual at any time without notice.

TABLE OF CONTENTS

CHAPTER 0	SAFETY FIRST
CHAPTER 1	GENERAL
CHAPTER 2	ENGINE
CHAPTER 3	CLUTCH
CHAPTER 4	TRANSMISSION
CHAPTER 5	HST
CHAPTER 6	REAR AXLE
CHAPTER 7	BRAKE
CHAPTER 8	FRONT AXLE
CHAPTER 9	STEERING SYSTEM
CHAPTER 10	HYDRAULIC SYSTEM
CHAPTER 11	ELECTRIC SYSTEM
CHAPTER 12	CABIN
CHAPTER 13	A/C AND HEATER
CHAPTER 14	INDEX
