

MAINTENANCE CHART

Maintenance Chart

Maintenance action	Grease				Adjust					Page no.
	Tighten				Cleaning					
	Replace				Drain fluid					
	Change fluid				Bleed					
	Check				Test					
Every 10 hours or daily										
Engine oil level										7-7
Engine cooling system										7-8
After first 50 hours										
Engine oil and filter										7-9
Fuel filter										7-10
Hydraulic oil filter										7-10
Hydrostatic (HST) oil filter										7-11
Roll Over Protective Structure (ROPS)										7-12
Wheels bolt/nut										7-13
Every 50 hours										
Grease fittings										7-14
Transmission fluid level										7-16
Wheels and tires										7-17
Clutch pedal free play										7-19
Hydrostatic Transmission (HST) neutral adjustment										7-19
Fan belt tension										7-22
Brake pedal free play										7-23
Front axle differential oil level										7-23
Air cleaner primary element										7-24
Every 100 hours										
Fuel filter water separator										7-25
Every 300 hours										
Engine oil and filter										7-26
Fuel filter										7-26
Hydraulic oil filter										7-26
Hydrostatic (HST) oil filter										7-26
Air cleaner primary element										7-27
Fan belt tension										7-27
Wheels bolt/nut										7-27
Roll Over Protective Structure (ROPS)										7-27
Every 600 hours										
Front axle differential fluid										7-28
Transmission and hydraulic fluid										7-29
Every 1000 hours										
Air filter inner safety element										7-31
Engine coolant										7-31
As required										
Fuel injection system										7-33
Fuel injectors										7-35
Hydrostatic Transmission (HST) neutral adjustment										7-36
Roll Over Protective Structure (ROPS)										7-38
Battery										7-39
Fuse identification										7-40
Maxi-fuse										7-41
Headlight										7-41