



- | | | | | | |
|--------------------|-----------------------|-------------------------------------|------------------------|--------------------------------|------------------------------|
| (1) main pump | (6) relief metal | (11) outlet of auxiliary hydrat | (16) slow return valve | (21) high pressure pipe fr | (26) reduce valve |
| (2) sub pump | (7) main relief valve | (12) auxiliary hydraulics control v | (17) cylinder case | (22) return hose for powe | (27) control pipe |
| (3) suction pipe | (8) joy stick valve | (13) outlet of auxiliary hydraulics | (18) safety valve | (23) hose for power steer | (28) power shuttle&PTO valve |
| (4) suction filter | (9) joy stick coupler | (14) external auxiliary hydraulics | (19) orbit roll | (24) assist cylinder* | (29) pipe for PTO |
| (5) delivery pip | (10) joy stick lever | (15) main control valve | (20) power steering | (25) hose for assist cylinder* | |
- * Only for MF1547/MF1552