


LIFT/TILT VALVE

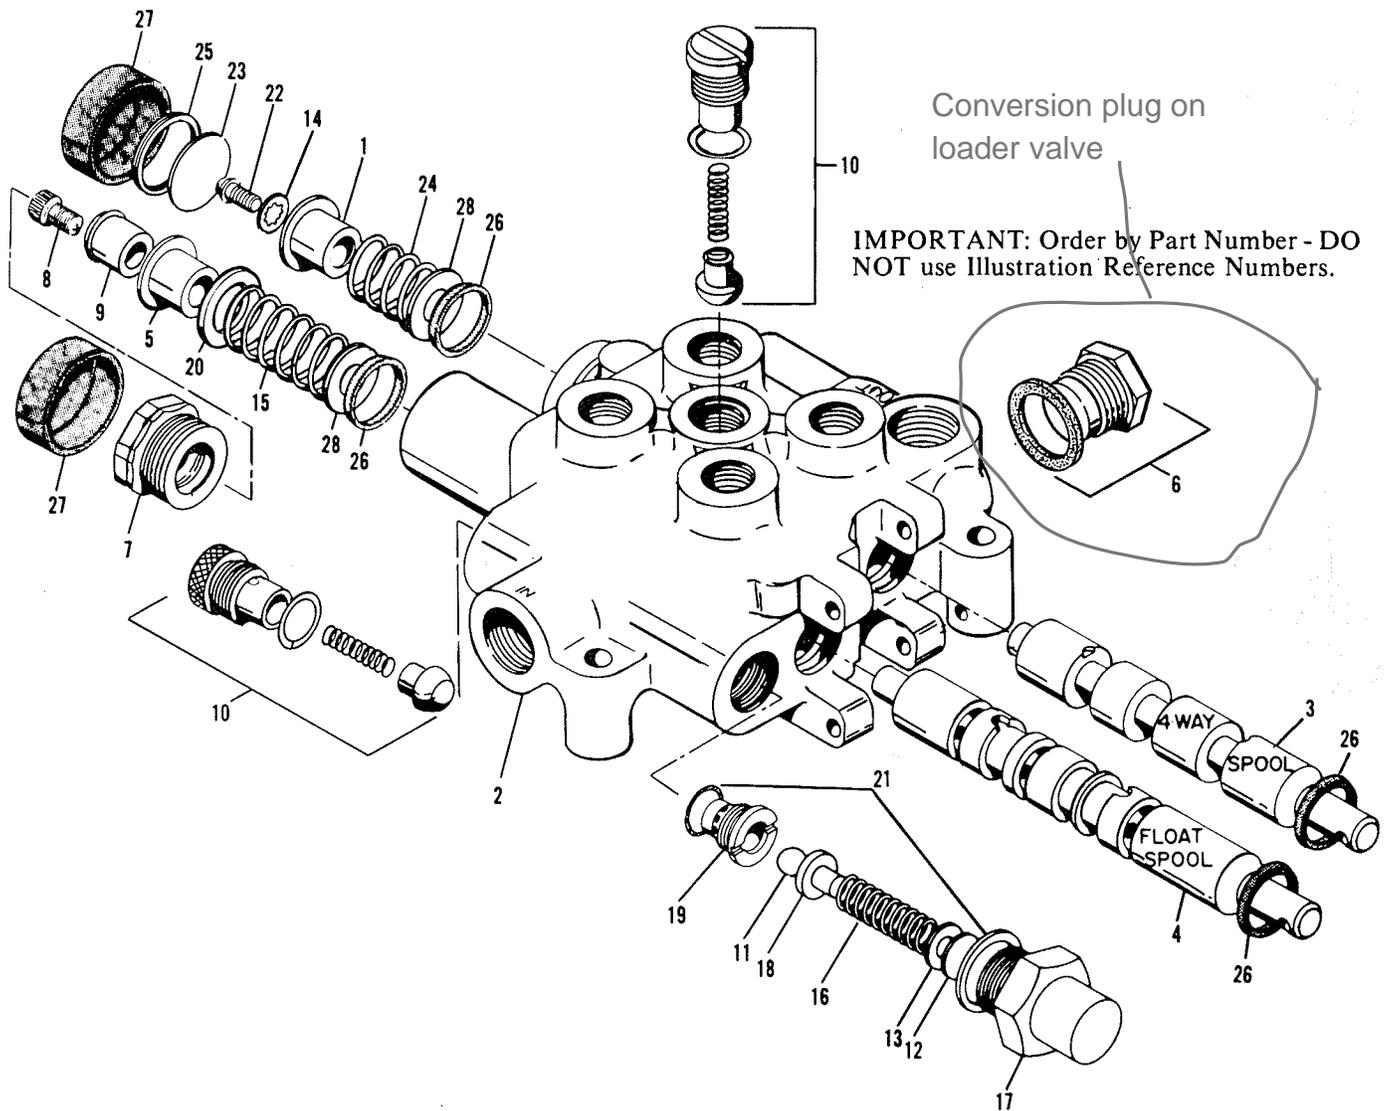

Ref. No.	Part No.	Part Name	No. Req.	Ref. No.	Part No.	Part Name	No. Req.
	063070	Lift/Tilt Valve Assembled	1	17	066793	Relief Valve Body	1
		Consists of:		18	066794	Guide	1
1	047699	Stop Collar	1	19	066795	Relief Valve Seat	1
2	047707A	Housing	1	20	066796	Shim Washer	1
3	047708A	4-Way Spool	1	21	066797	Gasket, O-Ring Seal Kit	1
4	047709A	4-Way Float Spool	1	22	580006	Spring Bolt Assembled	1
5	047711	Float Spring Collar	1	23	580013	Stop Disc	1
6	047714	Conversion Plug	1	24	580014	Centering Spring	1
7	047721	Detent	1	25	580015	Snap Ring	1
8	047722	Cap Screw	1	26	580030B	Seal	4
9	047724	Detent Plunger	1	27	580033	Rubber Bonnet	2
10	061188	Check Plug Kit	2	28	580039	Stop Washer	2
11	066787	Relief Valve Ball	1				
12	066788	Shim	As Req'd.				
13	066789	Relief Spring Washer	1				
14	066790	Lock Washer	1				
15	066791	Float Centering Spring	1				
16	066792	Relief Spring	1				

A Housing and Spools may not be ordered as separate items. All Spools are fitted to individual housings at the factory.

B Tool number 060644 necessary for installation.