


- Adjust transmission/hydraulic oil to correct level with proper oil. (See Transmission and Hydraulic Oil in Section 10, Group 20.)

AG,OUO1085,193 -19-16JUL02-2/6

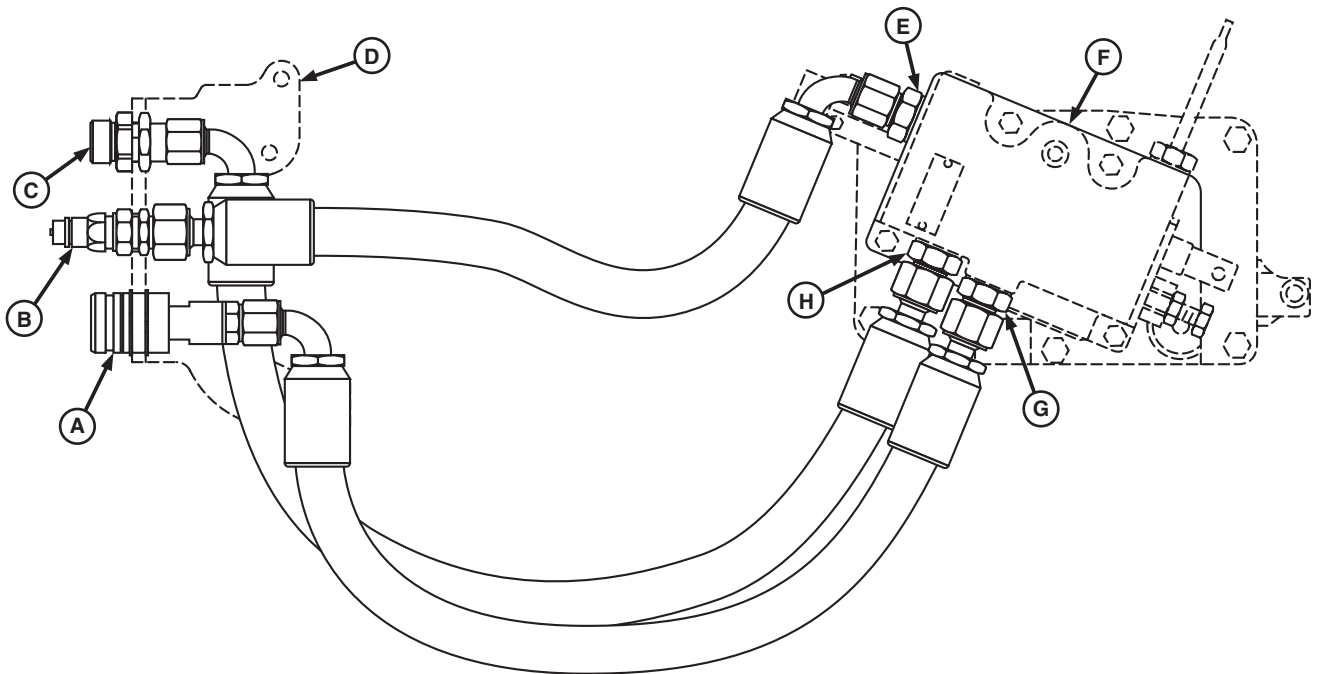

TRACTORS WITH REAR SCV AND WITHOUT MID-MOUNT CONTROL VALVE

- | | | | |
|-------------------------------------|-------------------------------------|-----------------------|-------------------------------|
| A—Power Beyond Pressure “P” Coupler | C—Power Beyond Return “R” Fitting | E—Return to Tank Port | H—Excess Flow Return Oil Port |
| B—Power Beyond Tank “T” Coupler | D—Rear Power Beyond Coupler Bracket | F—End Cap | |
| | | G—Pressure Oil Port | |

- Operate SCV levers to relieve any pressure in system.

IMPORTANT: Replace all O-rings. Damaged or used O-rings will leak.

- Inspect lines and fittings. Replace worn or damaged parts. Replace hoses that are cracked, soft or swollen.

- Adjust transmission/hydraulic oil to correct level with proper oil. (See Transmission and Hydraulic Oil in Section 10, Group 20.)

Continued on next page

AG,OUO1085,193 -19-16JUL02-3/6

LV7948 -UN-17JUL02

70
25
3