



CONSTRUCTION ATTACHMENTS, INC.



AUXILIARY HYDRAULICS

INSTALLATION INSTRUCTIONS

for

**Kubota Tractor/Loader Model L48 & L48 Quick
Hitch**

KIT PART NO. 365L060 (L48)

KIT PART NO. 365L061 (L48QH)

CONSTRUCTION ATTACHMENTS, INC.

VALVE FITTINGS (fig 1)

In a clean working environment, remove the protective port plugs from the solenoid valve (1). Be sure to prevent contaminants from entering the valve. Install the straight thread 45° adapters (4) into the loader ports of the valve. Install the straight thread 90° elbows (2) into the pressure and exhaust ports on the side of the valve. Leave these fittings loose until final hose routings are determined.

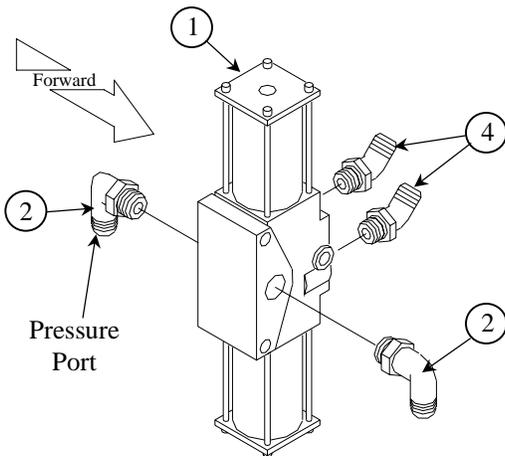


Figure 1

1. Solenoid Valve
2. Straight Thread 90° Elbow (3/4-16 SAE straight thread w/O-ring to 7/8-14 male JIC 37° flare)
4. Straight Thread 45° Elbow (3/4-16 SAE straight thread w/O-ring to 9/16-18 male JIC 37° flare)

VALVE to VALVE BRACKET (fig 2)

Attach the valve bracket (6) to the exhaust side of the solenoid valve (1) as shown and secure with cap screws (13) and locknuts (14).

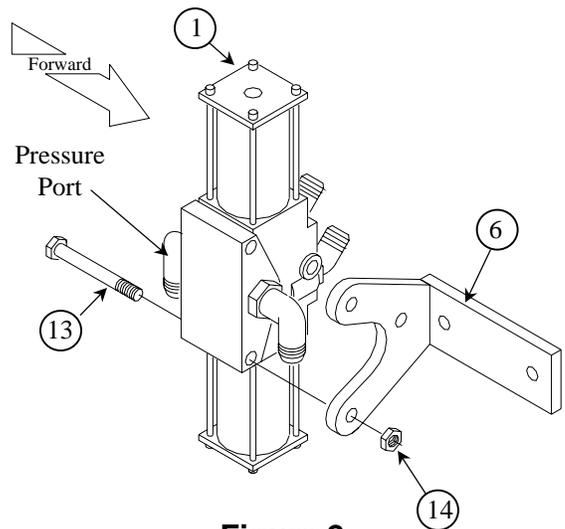


Figure 2

1. Solenoid Valve
6. Valve Bracket
13. 3/8 NC x 3-1/2 Hex Head Cap Screw Grade 5
14. 3/8 NC Hex Locknut