



Bad Splice
Water in harness
No solder or Heat Shrink
These are corroded were holding
on by 2 strands each

Symptom
Won't Start just clicks from relays
under hood.
Intermittent operation on lights
and flashers.