

BLEEDING FUEL SYSTEM ON 755 TRACTOR

IMPORTANT: Modification or alteration of injection pump, injection pump timing, or fuel injectors not recommended by manufacturer will terminate warranty obligation to purchaser. See warranty information inside front cover.

Do not attempt to service injection pump or fuel injectors yourself. Special training and special tools are required. See your John Deere dealer.

Bleed air from fuel system:

- After you service fuel system.
- If you run out of fuel.


NOTE: Fuel will flow when key is turned to ON position.

1. Loosen bleed screw (A).
2. Turn key to ON position. Fuel pump will run.
3. Tighten screw when fuel flows free of bubbles.
4. Turn key to OFF.

Push reset button (A) on air restriction indicator.

START engine and allow to run one minute at maximum speed.

If engine does not start or runs rough for more than 30 seconds, follow steps 5 through 11.

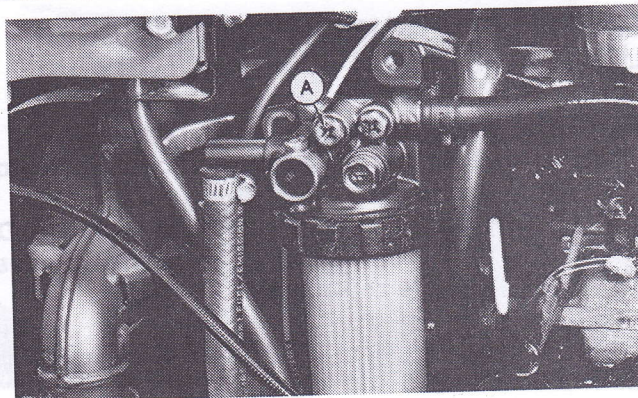

M71043 -UN-16JUL90

MX,SEY,CM -19-17JUL90


5. Loosen bleed screw on injection pump.

6. Turn key to ON position.

7. Tighten screw when fuel flows free of bubbles. START engine.

NOTE: Engine may run rough for 30 seconds while injection lines fill with fuel.

If engine does not start or runs rough for more than 30 seconds, follow steps 8 through 11.

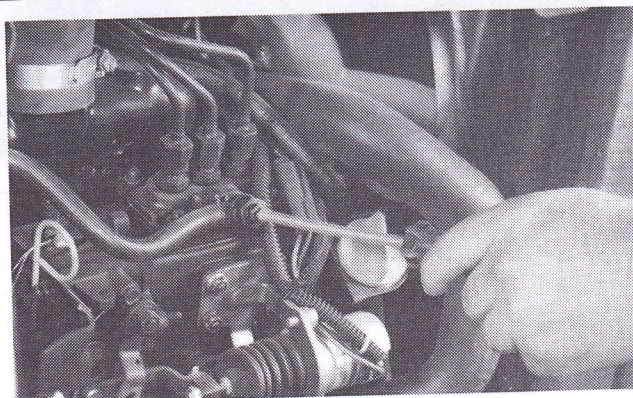

M39654 -UN-08SEP88

MX,SEY,CN -19-17JUL90