



Switch On: Volts from I go GRD should be approx battery voltage.

Switch Off: Jumper S to GRD, switch back on, and you should get full scale reading on gauge.