

## LUBRICATION AND MAINTENANCE

### STORAGE

With backhoe removed from tractor, all cylinders are fully retracted with exception of dipper cylinder. If backhoe is to be stored for prolonged periods, it is advisable to take following additional steps:

1. Park inside if possible. Cover seat and control console with plastic.
2. Protect exposed cylinder rods with light application of hydraulic oil (inside storage) or grease (outside storage).
3. Touch up bare spots with paint available from dealer.
4. Lubricate all fittings before and after storage.