



Figure 3-21

Switch Removal

1. Remove bolts, 1, from the right side of firewall, 2, and left rear side panel, 3.
2. Remove right rear side panel, 4, to gain access to the light switch, 5.
3. To remove the switch, 5, unplug it from the harness, release the retaining tabs, and lift the switch out of the dash, 6, from the top.