


## [5] ECU CONTROL SYSTEM (GST MODEL AND HST MODEL)

### (1) Checking Fuse and Connector

- Checking fuses, refer to "[4]-(1) Check The Fuse and Connector" in this section.

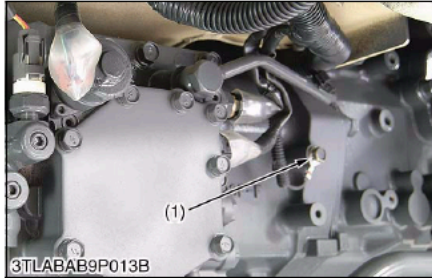


#### Checking Ground Cable

1. Check the whether the ground cable (1) is connected securely to the tractor chassis.
2. If the grand cable is broken or disconnected, replace it.

(1) Ground Cable

W1058245

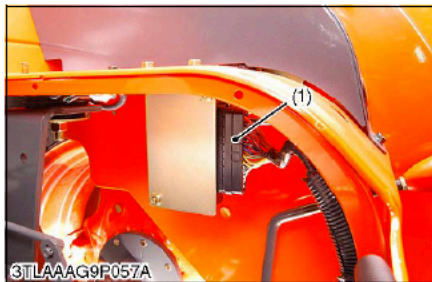

#### Checking ECU Connector

1. Disconnect the connector (1), and check their terminals for contamination and deformation.
2. Check to see that cable does not broken or terminals are not shelled off.
3. If any defective parts are found, repair or replace them.

#### ■ IMPORTANT

- **Connect connectors surely after checked.**

(1) ECU Connector (44P)

W1037538