

THE FUEL INJECTION PUMP

Change the injection pump oil every 200 hours.

1. Remove the drain plug located at the bottom of the injection pump to drain the old oil. See Figure 31.
2. Install the drain plug.
3. Remove the filler plug and fill with clean engine oil as specified on page 22, until oil flows from the breather pipe.

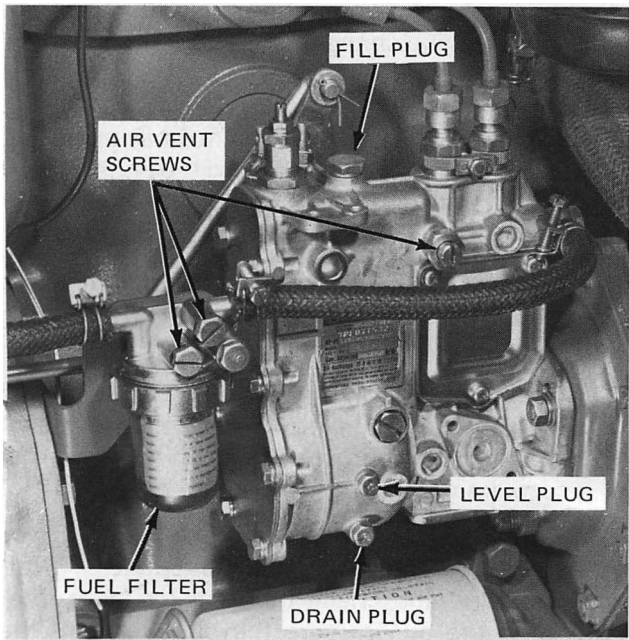


Figure 31 — Fuel Injection Pump