



5.3.4 Removing hydraulic piston

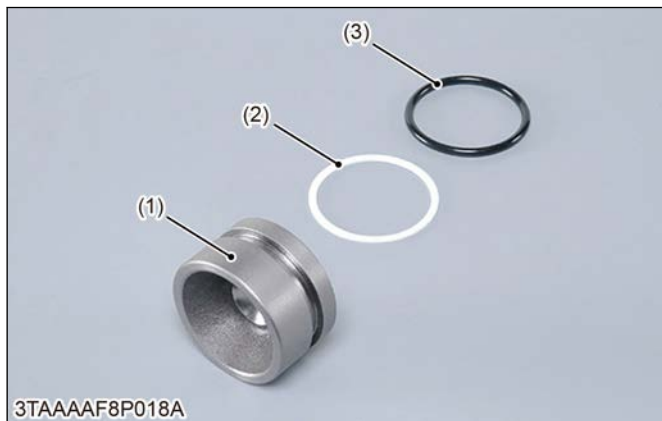

- (1) Hydraulic piston
(2) Back-up ring
(3) O-ring

1. Inject the compressed air into the hydraulic cylinder, and remove the hydraulic piston (1).

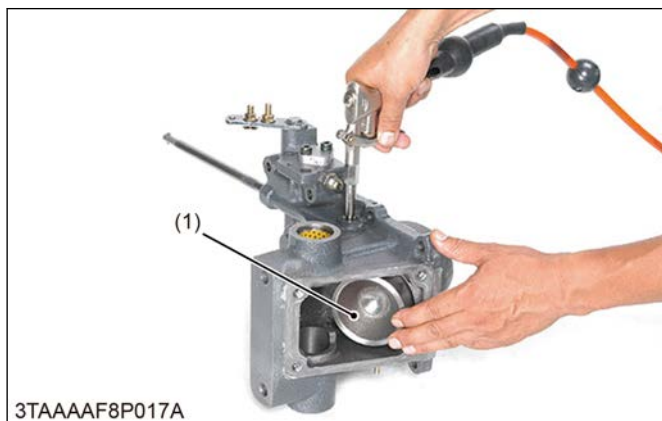


- (1) Hydraulic piston

(When reassembling)

- Be careful not to damage the O-ring (3) and back-up ring (2).
- Apply transmission fluid to the O-ring.
- Replace the O-ring if it is damaged, worn or scratched, which may cause oil leakage.

5.3.5 Removing lowering speed adjusting valve

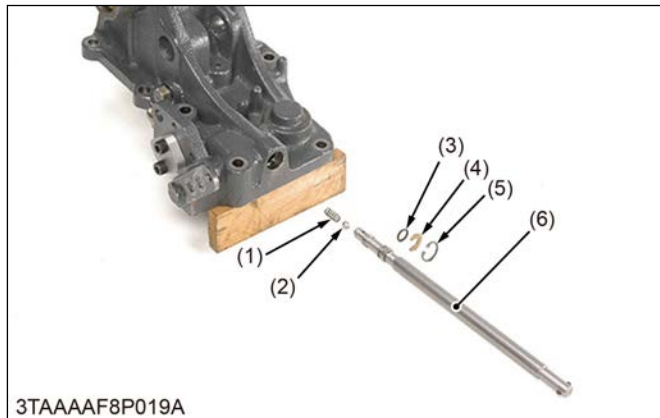

- (1) Spring
(2) Ball
(3) O-ring
(4) Stopper
(5) Internal snap ring
(6) Lowering speed adjusting shaft

1. Remove the internal snap ring (5) and remove the lowering speed adjusting shaft (6).
2. Remove the ball (2) and spring (1).

(When reassembling)

- Be careful not to damage the O-rings.