

# AXLES

## 4. REMOVAL


### FRONT AXLES

#### SUPER-A TRACTOR (See *Illust. 5*)


- (1) Lock the brakes; then hoist the forward end of the tractor sufficiently to take the weight of the tractor off the axle.
- (2) Remove the cotter securing each tie rod adjustable ball seat to the steering gear arm.

(See *Illust. 4.*) Remove the adjustable ball seats and the tie rod ends from the steering gear arm.

- (3) Remove the cap screws securing the front axle pivot shaft to the clutch housing. Pull the clutch end of the shaft down from position and pull the pivot shaft from the axle. (See *Illust. 4.*) Raise the front end of the tractor and pull the axle away for disassembly.

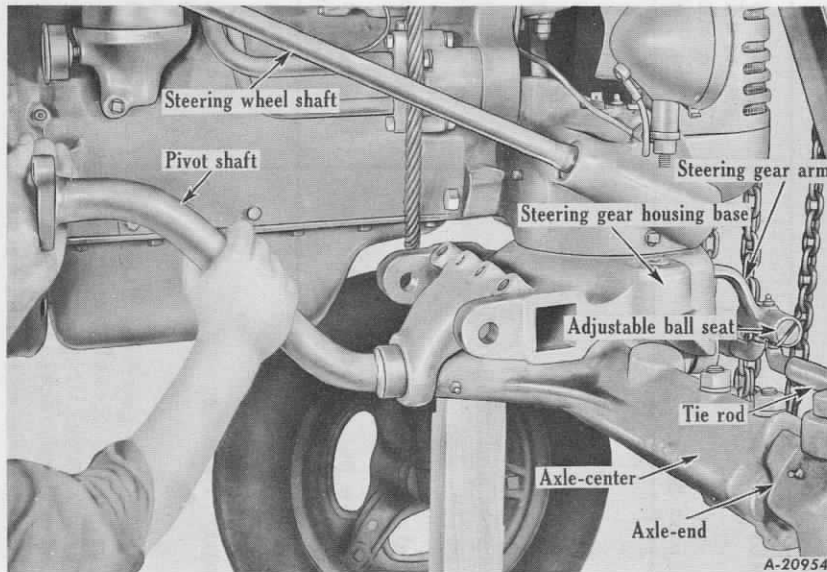

ILLUST. 4 - REMOVING THE AXLE PIVOT SHAFT (SUPER-A TRACTOR ).

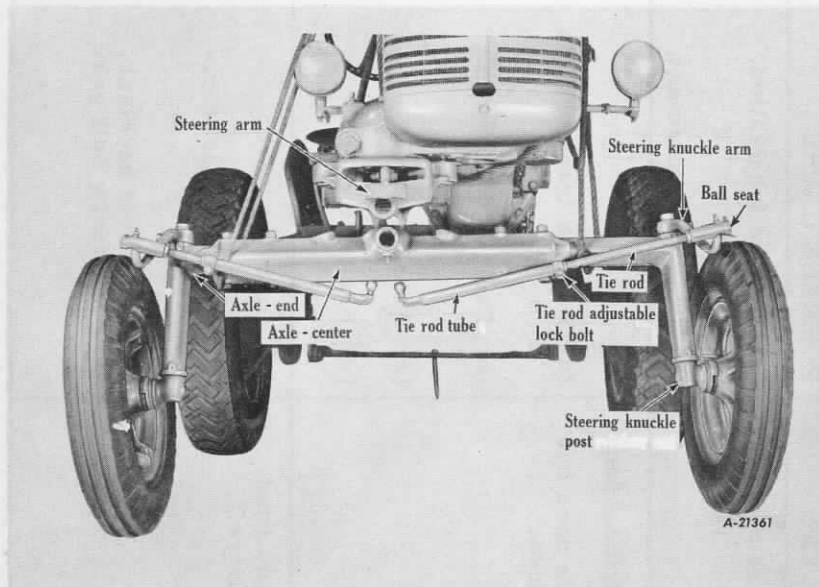

ILLUST. 5 - FRONT AXLE, PIVOT SHAFT REMOVED (SUPER -A TRACTOR ).