



## 5000 / 6000 SERIES

### NOTES:

- 1) HOUSING TABS MUST CONTACT INSTRUMENT PANEL POSTS. FULL AREA CONTACT IS NOT REQUIRED. HOUSING TABS MUST BE FREE OF VISIBLE STRESS CRACKS.
- 2) USE REDUCED DRIVER RPM TO AVOID STRIP TORQUE.
- 3) TORQUE SEQUENCE AS INDICATED - APPROX. 12-20 IN-LBS HAND TIGHTEN IF NOT TOUCHING.