


MAIN SHIFT LEVER

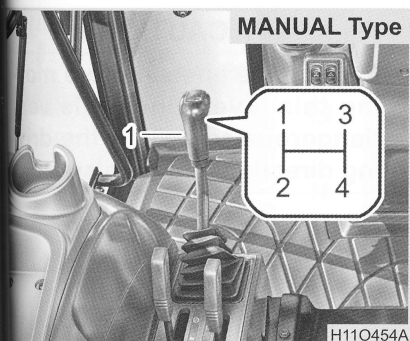


(1) Main Shift Lever

Four speeds can be selected by moving this main shift lever in "H" shaped path. You can shift into this lever from the 1st to 4th gears even when the tractor body is moving by disengaging the clutch during driving as these gears are synchromeshed.

In total, 24 forward driving speeds and 24 reverse driving speeds are provided by combination of the main shift lever (4 speeds), range shift lever (3 speeds), shuttle shift lever, and creep speed lever.

RANGE GEAR SHIFT LEVER

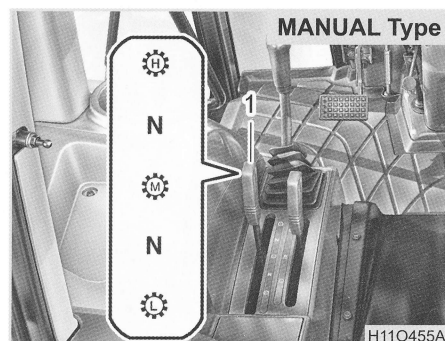


(1) Range Gear Shift lever

(H) High Speed (M) Mid Speed
(L) Low Speed (N) Neutral

High, mid and low speeds can be selected by the range shift lever. Make sure to shift the range shift lever after the tractor is completely stopped by depressing the clutch pedal.

If the lever is not moved freely or makes abnormal noise, put the lever into the neutral position, engage and disengage the clutch, and then try to shift the lever.

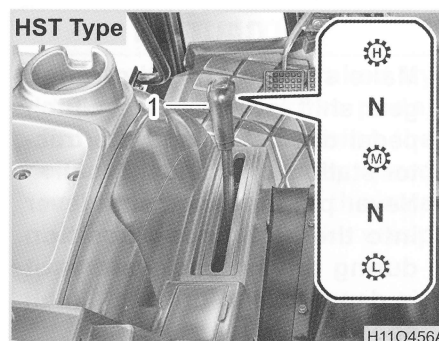

(1) Range Shift Lever

(H) High Speed (M) Mid Speed
(L) Low Speed (N) Neutral

High, mid and low speeds can be selected by the range shift lever.

Follow the instruction below if a problem occurs during shifting this lever:

1. Put the range shift lever into the neutral position.
2. Depress the pedal slightly to prevent the gears in the transmission from rotating.
3. Shift the range shift lever into the desired position with the brake pedal and front/rear driving pedals depressed. (HST type)