

2

Problems	Causes	Countermeasures
Inoperative horn	Burnt out fuse	Inspect and renew. Check circuit before re-connecting power
	Loose or broken wires of connections	Inspect circuit, tighten connections, or renew wiring
	Defective horn switch	Check and renew
	Defective horn	Check and renew

3. GLOW SYSTEM

Problems	Causes	Countermeasures
All glow plugs do not heat red	Discharged Battery	Check battery and charge or renew
	Loose or defective battery cable connections	Inspect, clean, and tighten connections
	Loose wire harness connections	Check and ensure connectors securely engaged
	Burnt out fusible link	Inspect and renew. Check circuit before re-connecting power
	Faulty wiring	Check glow plug circuit wiring and repair or renew
	Defective main switch	Check and renew
Individual glow plug does not glow	Defective glow plug	Check and renew
	Defective or corroded glow plug contacts	Inspect, Clean, or renew
	Loose or broken wires	Inspect, secure, repair, or renew wiring
Glow monitor light does not illuminate	Defective glow timer	Check and renew
	Defective glow monitor light or monitor and warning check unit	See "Light system troubleshooting"

4. START

Problem Starter motor does not s

Engine slowly

5. CH

Pro Batter in ch disch

Alt cha hig (B ov N fr al