

MAIN FUSE

Description

The main fuse is a 30 amp fuse, 1, located on the left-hand side of the engine compartment fire wall, for 1725, 1925, 1530, and 1630, or wire tied to the main harness for TC25, TC25D, TC29, TC29D, TC33, and TC33D, Figure 3-10, positioned in the area of the engine starter. This fuse protects the tractor's entire electrical system.

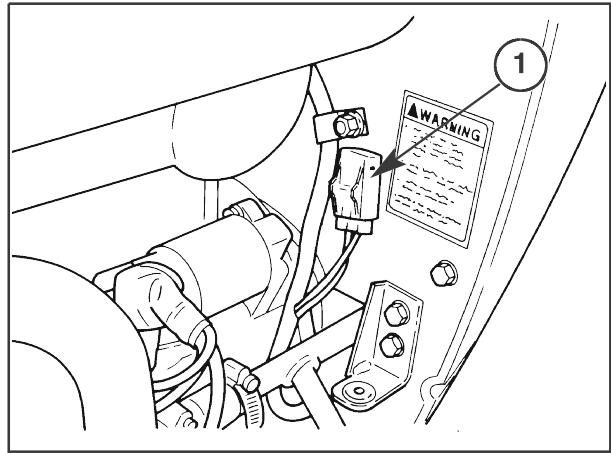


Figure 3-9

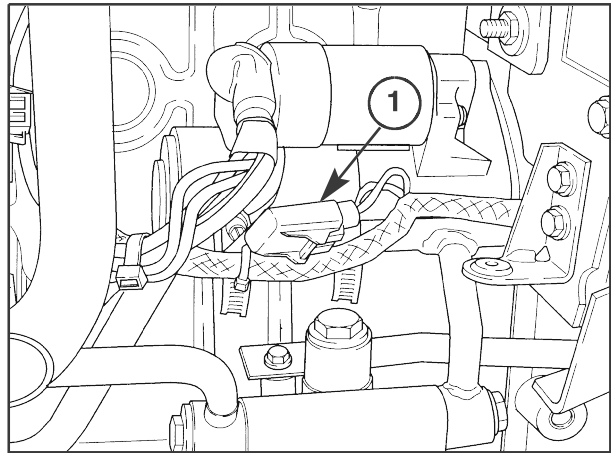


Figure 3-10

Replacing the Main Fuse

To replace the main fuse:

1. Unplug the connector to expose the fuse.
2. Remove the old fuse from the fuse holder and replace.

IMPORTANT: Always replace this fuse with a similar 30 amp fuse; DO NOT increase amperage rating.

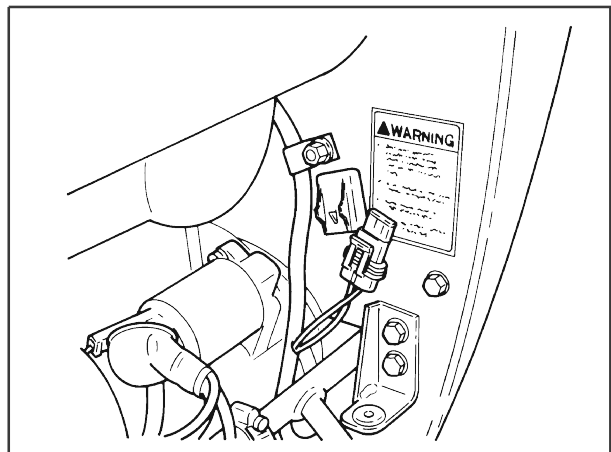


Figure 3-11