



Figure 9-46

## STEERING COLUMN REMOVAL AND DISASSEMBLY

**NOTE:** The fixed steering column and the tilt/telescoping steering column use the same removal process.

1. Remove both side panels, 1 and 2, from the dash console, 3, by loosening bolts, 4.

2. Remove dash console, 3, from the engine firewall, 5, and the steering column, 6, by loosening bolts, 7, and unscrewing the throttle handgrip.

**NOTE:** The wiring harnesses do not need to be removed. Place the console on the hood.