

Check the Motion Control Dial using Checker Mode

Note: this was made for checking the pedal position sensor in checker mode. Just toggle through to "motion control" to check the min/max values.

1. Hold down the "Disp" button and turn the key to the run position.



2. Keep holding the "Disp" button until you see "Checker" appear on the screen.



Check the Motion Control Dial using Checker Mode

3. Release the "Disp" button and then long press it again until the black background on checker disappears, then release the button.
4. You will see "Switch", "Meter", and "T/M" appear on the screen.
5. Short press the "Disp" button until you highlight "T/M".
6. Long press the "Disp" button until you see the sensor check function appear.
7. Short press the "Disp" button to toggle through the different sensors until you see "Motion Control Dial" appear. turn the dial and watch the value when at min/max.
8. The minimum value should be at or around 3.98 , and you should see the voltage change while turning the dial until you get a maximum value at or around .95.

The meter should display "motion control dial" not what is showing below.

