

News Number: YASN2017-008-A_SA221_Towing or Pushing the Tractor

SUBJECT: Towing or Pushing the SA221 Tractor

Effective Date: August 15, 2017

Dear Valued Yanmar Tractor Dealerships

At Yanmar America Corporation, we are committed to building high quality and a community of satisfied customers. Please refer to the following bulletin for information on updates to be completed on affected machines.

AFFECTED MODEL(S): SA221 Tractor



Information




SA221 has no range shift lever since it is a single range shift. The transmission allows the operator the ability to freewheel the tractor in the event it need to be moved while the engine is not running.

WARNING - When towing the tractor:

- travel slower than 10 mph (16 km/h)
- always have another person sit on the tractor to allow independent operation of the steering and brakes when required.

Control Lever Setting:

1. Push down Power Take Off (PTO) switch (A) to OFF position.
2. Disengage the parking brake (B).
3. Disengage the 4-wheel drive (C).
4. Access to the rear left side of the tractor after setting the control levers.

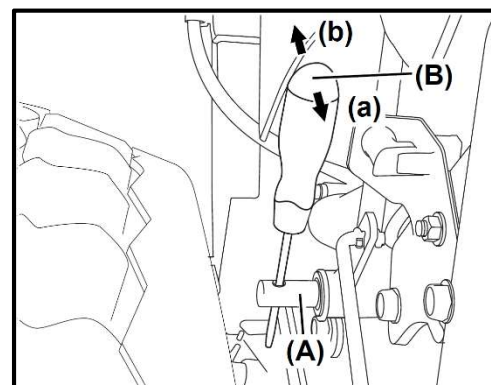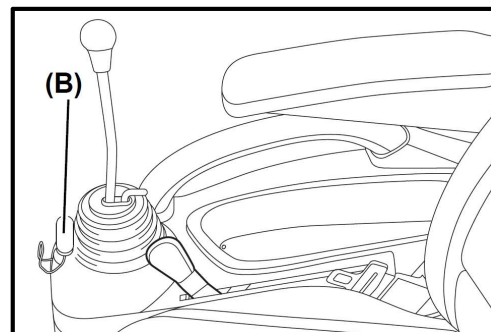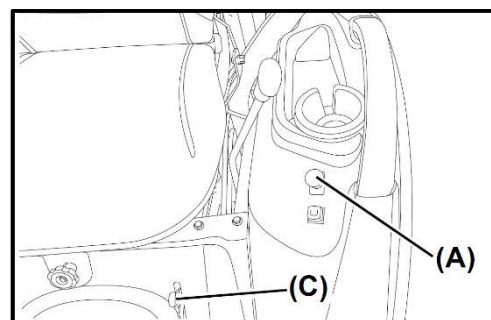

Moving the range shift lever into Neutral:

5. Insert the screw driver (B) into the hole of the shaft at the joint of Mid-/Rear Power Take Off (PTO) select lever (A) under the left fender.
6. Pull the screw driver backward (a) until the shaft can rotate clockwise (backward).
7. Make sure that the tractor can be moved by hand and take the screw driver out of the hole.



CAUTION

After pushing or towing the tractor, make sure to return the shaft to the original position pushing the screw driver forward (b) until the shaft can rotate counterclockwise (forward).

Otherwise the tractor will not move when the HST is pressed.

Yanmar America Corporation

Tel: 1-855-416-7091

e-mail: cs_support-ya@yanmar.com