
IMPORTANT:

Engine Oil Fill Procedure

1. Remove the engine oil dipstick from the engine, to provide crankcase ventilation.
2. Add engine oil SLOWLY, at a rate that does not flood the valve cover or funnel. Extra care is required when using containers larger than 1 quart/liter or oil supplied from a bulk container.
3. When changing the engine oil, add the exact amount specified in the operator's manual.



WARNING



Failure to follow the above instructions, could allow oil to enter the engine cylinders above the pistons, and may result in possible engine damage.
