


Reroping Procedure

Dismounting winch from tractor is not necessary.

1. To make clearance, disconnect PTO drive line at the winch and remove brake rod guide 71-72 (10mm socket) and clutch lever pivot bolt 24 (18mm socket, 19mm end wrench).
2. Remove guard 65 (3 screws, 13mm socket).
3. Remove one screw from rope clamp 7-9 (10mm end wrench), and loosen the other.
4. Seize the end of rope with vinyl tape, and make a 90° bend 4" from the end. Aim the bend direction to conform the reel axis to the as-shipped coil axis. The bent length will be used to wrangle the rope into the clamp.
5. Feed rope through sheave 32-33 and down to reel 6. Feed the end of the rope through the oval hole in the reel face and install clamp.
6. Cut off excess rope with angle grinder from below so that it clears parking brake 56-58 and 69.
7. Wrap the first layer on reel tight and neat with no overlapping. Never unspool the first layer.

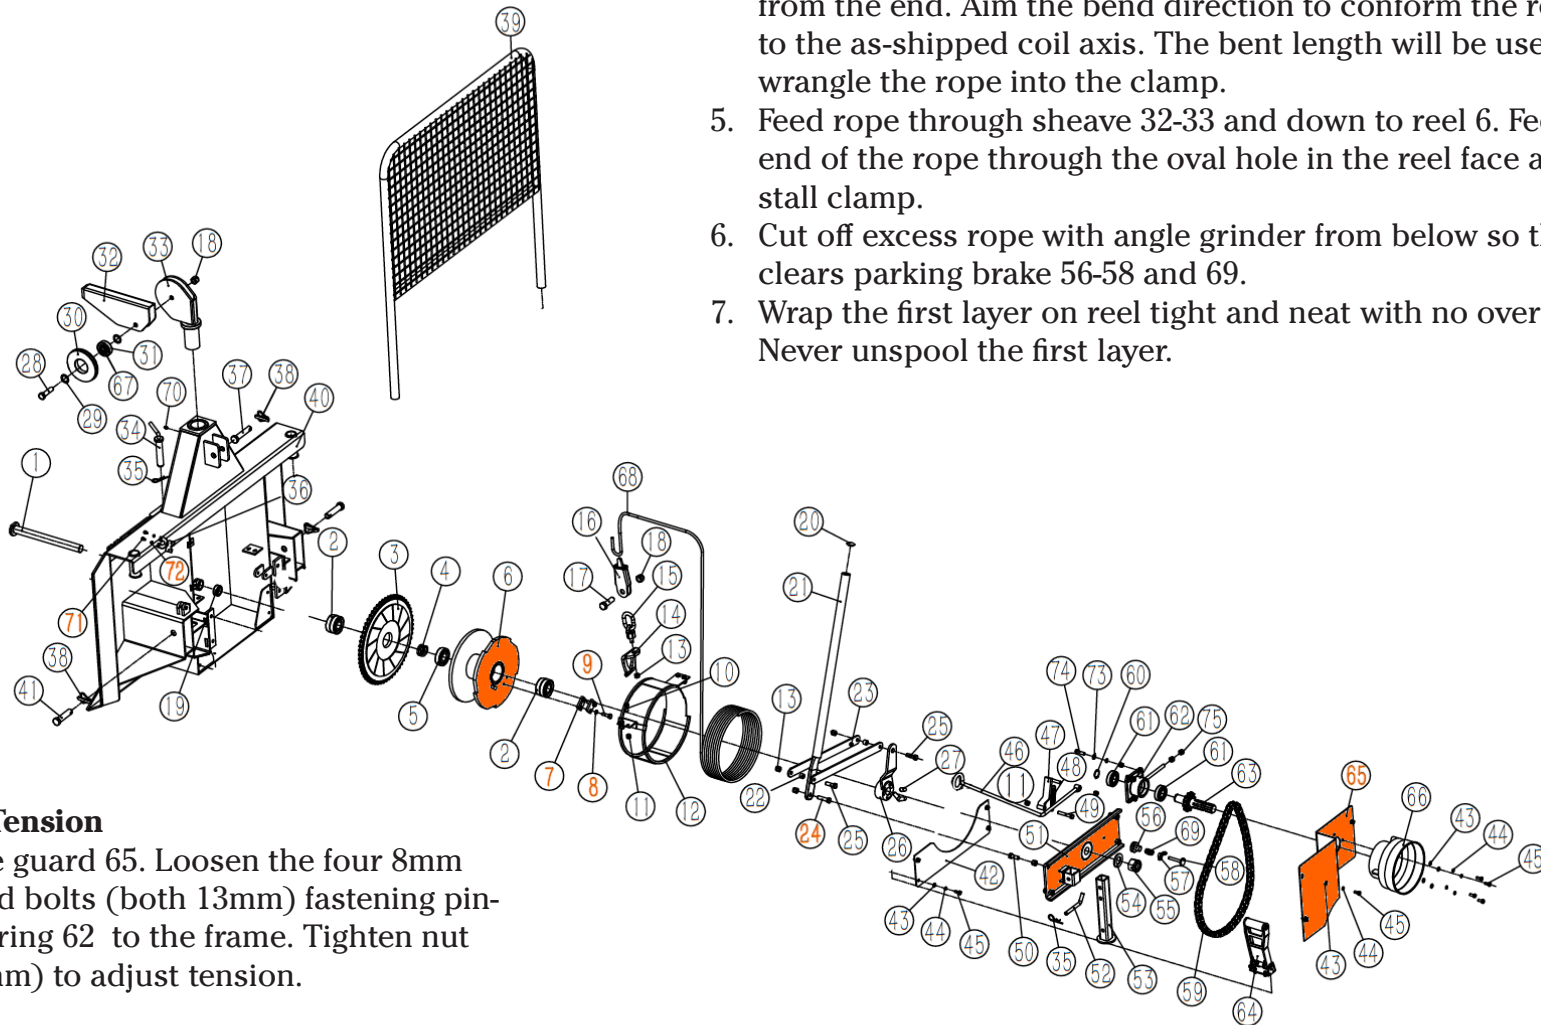

Chain Tension

Remove guard 65. Loosen the four 8mm nuts and bolts (both 13mm) fastening pinion bearing 62 to the frame. Tighten nut 75 (17mm) to adjust tension.