

Error code table

NO.	Dashboard Fault Code	Fault Code	Warning Lamp		Title
			AMB	RED	
1	s629 F12	P060B		1 Hz	ADC Circuit Fault inside of ECU
2	s132 F31	P0100		Solid on	AMF Sensor Failure
3	s132 F00 s132 F01	P0101		Solid on	AMF plausibility fault
4	s132 F03	P0103		Solid on	AMF Sensor high fault
5	s132 F04	P0102		Solid on	AMF Sensor low fault
6	s637 F02	P0341	Solid on	Solid on	Cam signal drift fault
7	s637 F10	P0340	Solid on		Cam signal learn fault
8	s636 F02	P0371		Solid on	Crank signal early fault
9	s636 F02	P0374		Solid on	Crank signal lost fault
10	s636 F02	P0372		Solid on	Crank signal missing fault
11	s636 F02 s636 F11	P0335	Solid on	Solid on	Crank over speed / gap lost fault
12	s108 F03	P2229		Solid on	Atmospheric pressure sensor high fault
13	s108 F04	P2228		Solid on	Atmospheric pressure sensor low fault
14	s168 F03	P0563	Solid on		Battery voltage high fault
15	s168 F04	P0562	Solid on		Battery voltage low fault
16	s651 F31	P0262		Solid on	Injector 1 resistance high fault
17	s653 F31	P0268		Solid on	Injector 2 resistance high fault
18	s654 F31	P0271		Solid on	Injector 3 resistance high fault
19	s652 F31	P0265		Solid on	Injector 4 resistance high fault
20	s651 F31	P0261		Solid on	Injector 1 resistance low fault
21	s653 F31	P0267		Solid on	Injector 2 resistance low fault
22	s654 F31	P0270		Solid on	Injector 3 resistance low fault
23	s652 F31	P0264		Solid on	Injector 4 resistance low fault
24	s630 F11	P0602		2 Hz	Injector code fault
25	s110 F02	P0116		Solid on	Coolant sensor plausibility fault
26	s110 F02	P0119		Solid on	Coolant sensor gradient fault
27	s110 F03	P0118		Solid on	Coolant sensor high fault
28	s110 F04	P0117		Solid on	Coolant sensor low fault
29	s110 F04	P0115		Solid on	Coolant sensor fault (global)
30	s3253 F07	P224A	Solid on		DP sensor leak detected
31	s3253 F11	P1453	Solid on		DP sensor tube Clamped
32	s3253 F11	P1452	Solid on		DP sensor tube inverted
33	s3253 F02	P2453	Solid on		DP sensor plausibility fault