 



 
 
 
 




 





 
 
 


REMOTE VALVE PACKING LIST


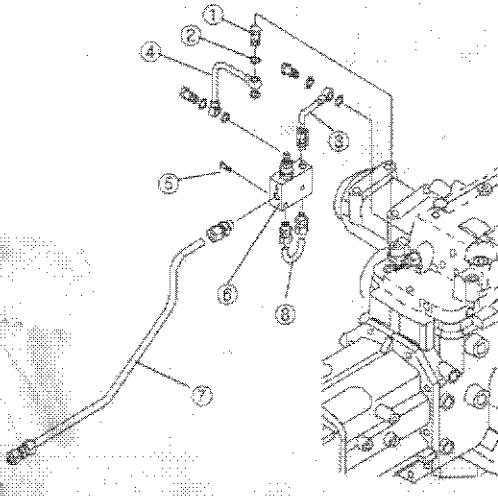
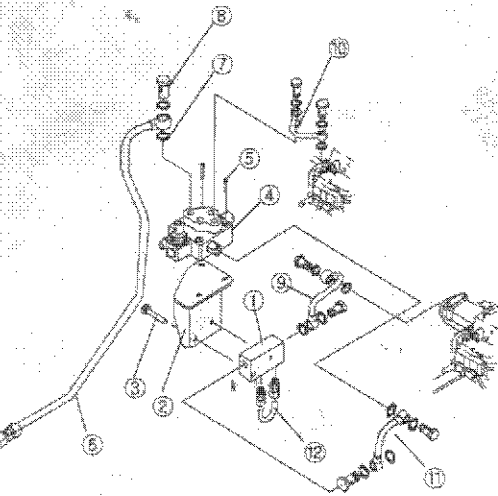
MODEL : S_Series

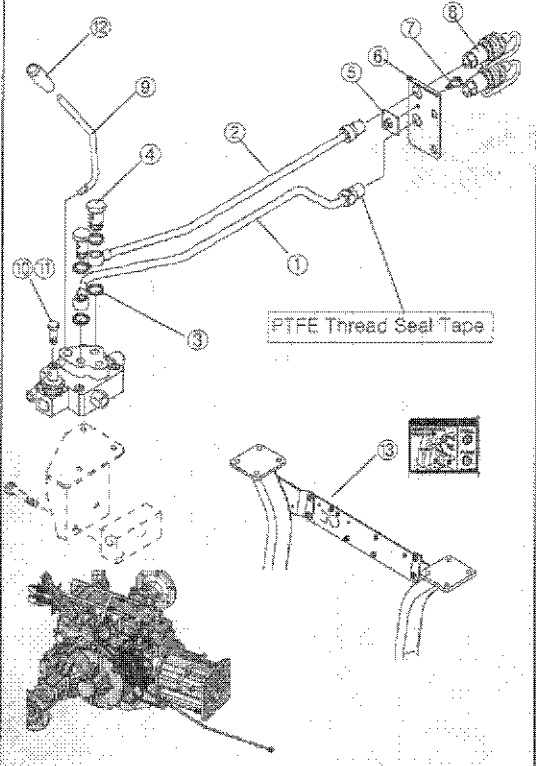
 
No	Drawing	Part_No	Part_Name	Qty/set
1		40007726	VALVE-REMOCON-TRG827	1
2		40007922	COUPLER-QUICK-TRG827	2
3		40008403	GRIP-AUX LEVER-TRG970	1
4		40008829	DECAL-AUX CONTROL-TRG980	1
5		40009185	BLOCK-OUTLET-TRG822	1
6		40010321	BOLT-UNION-TRG630	6
7		40011089	PIPE-REMOCON DRAIN/U-TRG827	1
8		40011090	PIPE-REMOCON DRAIN/D-TRG827	1
9		40011369	PIPE-R/PRESSURE-TRG823	1
10		40011427	BRACKET-REMOCON-TRG827	1
11		40011948	LEVER-REMOCON VALVE-TRG827	1
12		40012076	PIPE-M/PRESSURE-TRG823	1
13		40012077	PIPE-REMOCON DRAIN-TRG827	1
14		40223953	PIPE ASSY-M/PRESSURE-G823	1

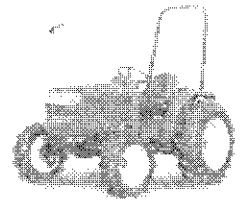
No	Drawing	Part_No	Part_Name	Qty/set
15		40012212	BRACKET-REMOCON PIPE-TRG827	1
16		40012319	BRACKET-REMOCON VALVE-TRG827	1
17		40012415	SEAL-BONDED-TRG823	18
18		40028769	NUT-HEX 2 TY-S305100013	1
19		40028930	BOLT-HEX W/WS-S153086033	3
20		40029008	BOLT-HEX W/WS-S159082533	1
21		40029364	BOLT-HEX-S101103043	1

Instruction manual for the assembly of Remote valve

Model : S_Series

Picture	Procedure																																																												
	<p>◆ Remove the rear tire(RH)</p>																																																												
	<p>◆ Disassemble as following order.</p> <table><tr><td>1</td><td>40010321</td><td>BOLT-UNION-TRG630</td><td>3</td><td>(Reuse after disassembly)</td></tr><tr><td>2</td><td>40012415</td><td>SEAL-BONDED-TRG823</td><td>6</td><td></td></tr><tr><td>3</td><td>40008055</td><td>PIPE ASSY-R/PRESSURE-G823</td><td>1</td><td>(Reuse after disassembly)</td></tr><tr><td>4</td><td>40011368</td><td>PIPE-DRAIN-TRG823</td><td>1</td><td></td></tr><tr><td>5</td><td>40028955</td><td>BOLT-HEX W/WS-S154106033</td><td>2</td><td></td></tr><tr><td>6</td><td>40182462</td><td>VALVE ASSY-RELIEF-G822</td><td>1</td><td></td></tr><tr><td>7</td><td>40150671</td><td>PIPE ASSY-F/PRESSURE-G823</td><td>1</td><td></td></tr><tr><td>8</td><td>40008120</td><td>PIPE ASSY-CONNECTION-G823</td><td>1</td><td>(Reuse after disassembly)</td></tr></table>	1	40010321	BOLT-UNION-TRG630	3	(Reuse after disassembly)	2	40012415	SEAL-BONDED-TRG823	6		3	40008055	PIPE ASSY-R/PRESSURE-G823	1	(Reuse after disassembly)	4	40011368	PIPE-DRAIN-TRG823	1		5	40028955	BOLT-HEX W/WS-S154106033	2		6	40182462	VALVE ASSY-RELIEF-G822	1		7	40150671	PIPE ASSY-F/PRESSURE-G823	1		8	40008120	PIPE ASSY-CONNECTION-G823	1	(Reuse after disassembly)																				
1	40010321	BOLT-UNION-TRG630	3	(Reuse after disassembly)																																																									
2	40012415	SEAL-BONDED-TRG823	6																																																										
3	40008055	PIPE ASSY-R/PRESSURE-G823	1	(Reuse after disassembly)																																																									
4	40011368	PIPE-DRAIN-TRG823	1																																																										
5	40028955	BOLT-HEX W/WS-S154106033	2																																																										
6	40182462	VALVE ASSY-RELIEF-G822	1																																																										
7	40150671	PIPE ASSY-F/PRESSURE-G823	1																																																										
8	40008120	PIPE ASSY-CONNECTION-G823	1	(Reuse after disassembly)																																																									
	<p>◆ Assemble as following order.</p> <table><tr><td>1</td><td>40009185</td><td>BLOCK-OUTLET-TRG822</td><td>1</td><td></td></tr><tr><td>2</td><td>40011427</td><td>BRACKET-REMOCON-TRG827</td><td>1</td><td></td></tr><tr><td>3</td><td>40028955</td><td>BOLT-HEX W/WS-S154106033</td><td>2</td><td>(Use disassembled parts)</td></tr><tr><td>4</td><td>40007726</td><td>VALVE-REMOCON-TRG827</td><td>1</td><td></td></tr><tr><td>5</td><td>40028930</td><td>BOLT-HEX W/WS-S153086033</td><td>3</td><td></td></tr><tr><td>6</td><td>40223953</td><td>PIPE ASSY-M/PRESSURE-G823</td><td>1</td><td></td></tr><tr><td>7</td><td>40012415</td><td>SEAL-BONDED-TRG823</td><td>14</td><td></td></tr><tr><td>8</td><td>40010321</td><td>BOLT-UNION-TRG630</td><td>7</td><td></td></tr><tr><td>9</td><td>40011369</td><td>PIPE-R/PRESSURE-TRG823</td><td>1</td><td></td></tr><tr><td>10</td><td>40012077</td><td>PIPE-REMOCON DRAIN-TRG827</td><td>1</td><td></td></tr><tr><td>11</td><td>40012076</td><td>PIPE-M/PRESSURE-TRG823</td><td>1</td><td></td></tr><tr><td>12</td><td>40008120</td><td>PIPE ASSY-CONNECTION-G823</td><td>1</td><td>(Use disassembled parts)</td></tr></table>	1	40009185	BLOCK-OUTLET-TRG822	1		2	40011427	BRACKET-REMOCON-TRG827	1		3	40028955	BOLT-HEX W/WS-S154106033	2	(Use disassembled parts)	4	40007726	VALVE-REMOCON-TRG827	1		5	40028930	BOLT-HEX W/WS-S153086033	3		6	40223953	PIPE ASSY-M/PRESSURE-G823	1		7	40012415	SEAL-BONDED-TRG823	14		8	40010321	BOLT-UNION-TRG630	7		9	40011369	PIPE-R/PRESSURE-TRG823	1		10	40012077	PIPE-REMOCON DRAIN-TRG827	1		11	40012076	PIPE-M/PRESSURE-TRG823	1		12	40008120	PIPE ASSY-CONNECTION-G823	1	(Use disassembled parts)
1	40009185	BLOCK-OUTLET-TRG822	1																																																										
2	40011427	BRACKET-REMOCON-TRG827	1																																																										
3	40028955	BOLT-HEX W/WS-S154106033	2	(Use disassembled parts)																																																									
4	40007726	VALVE-REMOCON-TRG827	1																																																										
5	40028930	BOLT-HEX W/WS-S153086033	3																																																										
6	40223953	PIPE ASSY-M/PRESSURE-G823	1																																																										
7	40012415	SEAL-BONDED-TRG823	14																																																										
8	40010321	BOLT-UNION-TRG630	7																																																										
9	40011369	PIPE-R/PRESSURE-TRG823	1																																																										
10	40012077	PIPE-REMOCON DRAIN-TRG827	1																																																										
11	40012076	PIPE-M/PRESSURE-TRG823	1																																																										
12	40008120	PIPE ASSY-CONNECTION-G823	1	(Use disassembled parts)																																																									

Picture	Procedure
	◆ Assemble as following order.
	1 40011090 PIPE-REMOCON DRAIN/D-TRG827 1
	2 40011089 PIPE-REMOCON DRAIN/U-TRG827 1
	3 40012415 SEAL-BONDED-TRG823 4
	4 40010321 BOLT-UNION-TRG630 2
	5 40012212 BRACKET-REMOCON PIPE-TRG827 1
	6 40012319 BRACKET-REMOCON -TRG827 1
	7 40029008 BOLT-HEX W/WS-S159082533 1
	8 40007922 COUPLER-QUICK-TRG827 2
	9 40011948 LEVER-REMOCON VALVE-TRG827 1
	10 40029364 BOLT-HEX-S101103043 1
	11 40028769 NUT-HEX 2 TY-S305100013 1
	12 40008403 GRIP-AUX LEVER-TRG970 1
	13 40008829 DECAL-AUX CONTROL-TRG980 1
	◆ Assemble the tire(RH)
	◆ Start the tractor and testing the remote valve



Mounting Remote Kit to S3010 with Loader

1. Remove right rear tire.
2. Remove the three hydraulic hoses leading from loader hydraulic valve to relief valve block. Be sure to note or mark the outlets on old relief block pressure and power beyond. These will be installed in the new outlet block in the same ports. These are located underneath the seat on the right side of the transmission housing. Drain hoses in a bucket.
3. Remove both pressure and return steel lines from the relief valve block to the 3-point hitch lift housing.
4. Remove relief valve block part number 6 in parts list disassembling section on page 3. Then, remove all fittings to be reused later. Loader rubber hydraulic lines pressure and power beyond will go back in the same positions or outlets in new block part #40009185. Return line will mount on top of the new remote valve. (see Fig. 2 mark return hose)
5. When mounting new block outlet (See Fig. 3), attach the block to the new bracket part #40011427 with the new bolts part #40028955 to the side of the transmission or rear housing. The steel, double lines part #12 (See page 3 of parts listing page) will be replaced by the loader lines pressure and power beyond.
6. Attach new steel lines to block outlet (see Fig. 3 & 4) of big pictures part # 40009185 (See page 3 of assembly parts list) to 3-point hitch lift housing. The two lines are part # 1040012077 and part # 40012076 (See page 3 of parts listing).
7. After removing the pressure line from the hydraulic pump from tractor part # 40150671 and replace with the new steel line part # 40223953 (See Fig. 5) and attach to new remote valve part # 40007726 as seen on page 3 of the parts page listing. Use sealing washers part # 40012415 on all hydraulic fittings.
8. Attach steel pressure line part # 40012076 block outlet part # 40009185 and remote part # 40007726.
9. Attach return line to remote valve (See Fig. 6). This hydraulic hose comes from the loader valve. Then, attach both remote steel lines from remote parts kit to remote valve (See page 4 of parts listing page). The two lines are part # 40011089 pipe and part # 40011090 pipe.
10. Attach female quick couplers part # 40007922 to both of the remote steel lines (See Fig. 6). Use sealant tape on remote fittings.
11. Attach decal AUX control to the rear plate as shown in the parts listing on page 4. The decal is part # 40008829.
12. Check for leaks.
13. Save all instructions.