


SCV Valve Component Location

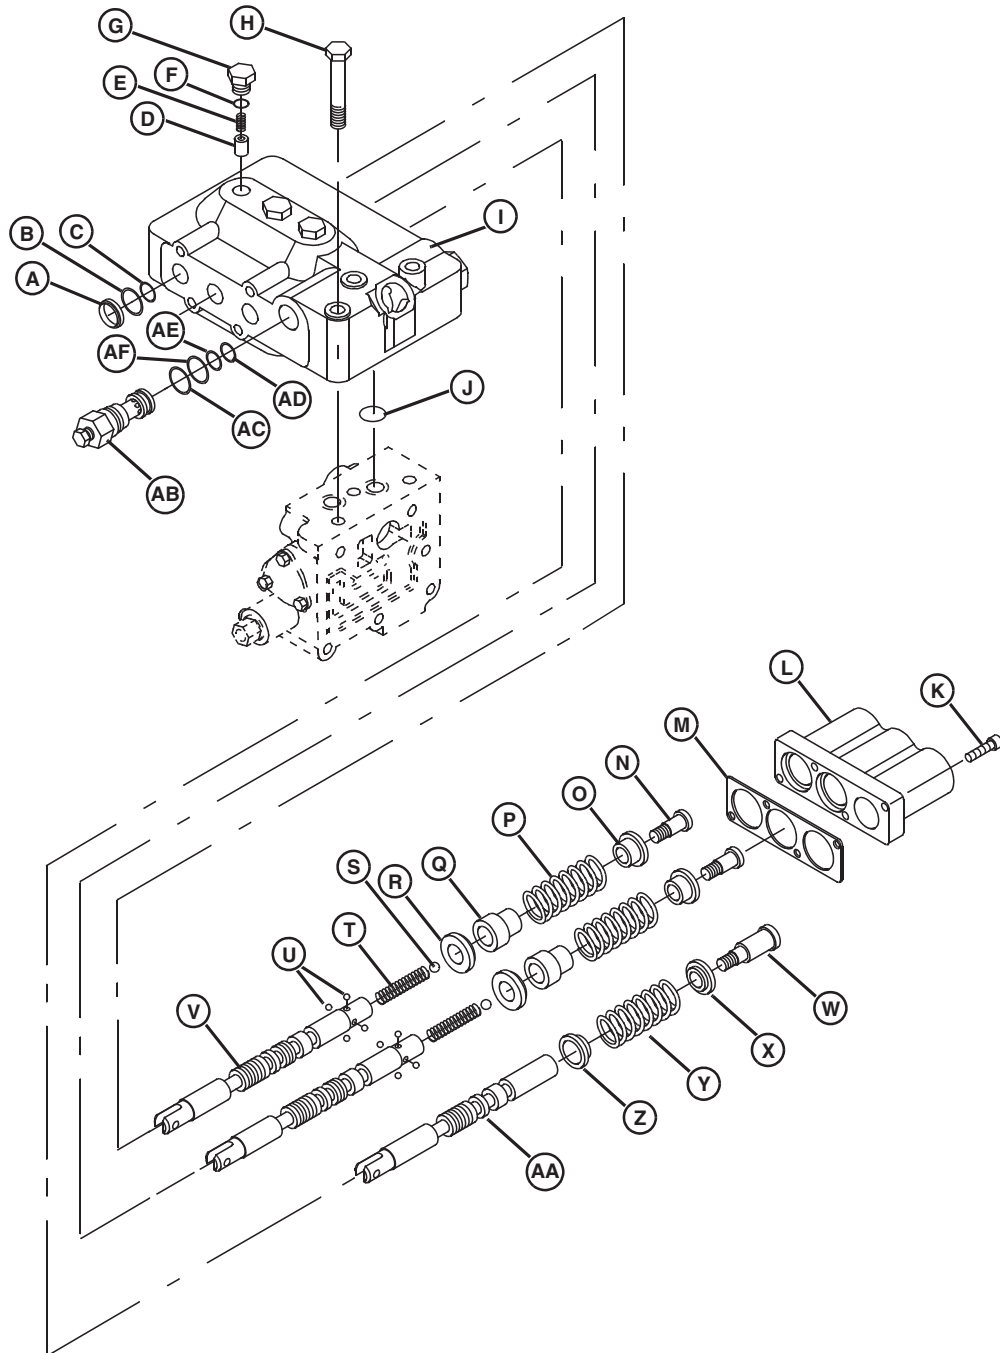

A—Seal (3 used)
 B—Backing Washer (3 used)
 C—O-Ring (3 used)
 D—Poppet (3 used)
 E—Spring (3 used)
 F—O-Ring (3 used)
 G—Cap (3 used)
 H—Cap Screw

I— Valve Body
 J— O-Ring
 K—Cap Screw
 L— Cover
 M—Gasket
 N—Plug
 O—Retainer, Spring
 P—Spring

Q—Retainer, Spring
 R—Spacer
 S—Ball
 T—Spring
 U—Ball (4 used)
 V—Spool
 W—Plug
 X—Retainer, spring

Y—Spring
 Z—Retainer, Spring
 AA—Spool
 AB—Valve, Relief
 AC—O-Ring
 AD—O-Ring
 AE—Backing Washer
 AF—Backing Washer

LVAL10960 —UN—24AUG10

AA95137,0002AA9 -19-13SEP10-1/1