

## 8.2.2 CHECKING WHEEL BOLT TORQUE




### CAUTION

To avoid personal injury:

- **Never operate tractor with a loose rim, wheel, or axle.**
- **Any time bolts and nuts are loosened, retighten to specified torque.**
- **Check all bolts and nuts frequently and keep them tight.**

Check wheel bolts and nuts regularly especially when new. If they are loose, tighten them as follows.

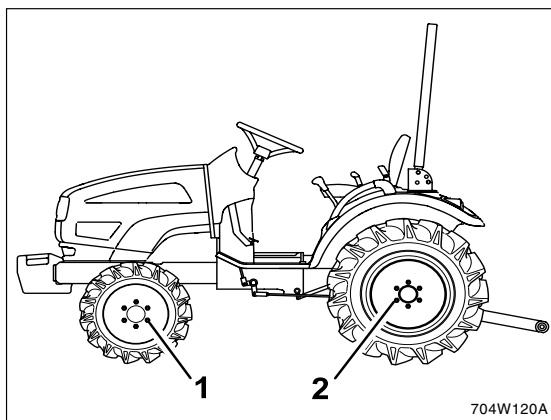

704W120A

(1) 68.6 Nm (7 kgf-m, 50.6 lb-ft)

(2) 284 Nm (29 kgf-m, 209.7 lb-ft)