

4.1.2 Steering control unit specifications

Specifications	
Displacement	50 cc/rev
Relief valve setting	85 kg/cm ² to 90 kg/cm ² (1208 psi to 1280 psi)

4.1.3 Remove the steering control unit

Procedure

1. Use a flat screwdriver to remove the middle cap on the steering wheel.
2. Remove the nut.
3. Pull the steering wheel upwards off the splined steering shaft.
4. Remove the screw (1) then remove the lower dash cover.

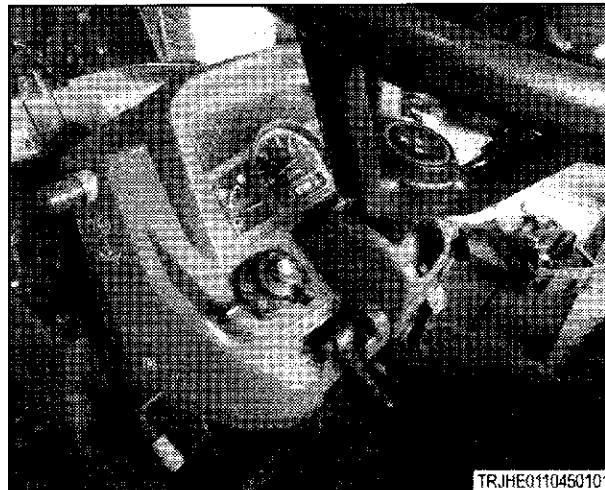


Fig. 5

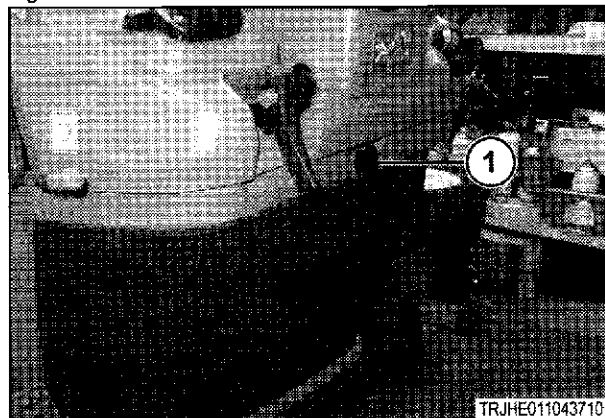


Fig. 6