

Switch Wire Location On Key Switch

NOTE: This procedure applies to the following tractors:
 5105 (S.N. —411578), 5205 (S.N. —421446),
 5010, 5010N, 5320N (S.N. —438002), 5420N
 (S.N. —448002), 5520N (S.N. —458020) and the
 Standard Tractors on the following two charts.

5210 is part of 5010

Standard Straddle Mount Tractors		
Model	Transmission	Serial Break
5220	Collarshift	(S.N. —420000)
5220	SyncShuttle	(S.N. —422003)
5220	SyncShuttle 2SP	(S.N. —425000)
5220	PowerRev	(S.N. —426003)
5220	PowerRev 2SP	(S.N. —429000)
5320	Collarshift	(S.N. —430000)
5320	SyncShuttle	(S.N. —432003)
5320	SyncShuttle 2SP	(S.N. —435004)
5320	PowerRev	(S.N. —436000)
5320	PowerRev 2SP	(S.N. —439001)
5420	Collarshift	(S.N. —440001)
5420	SyncShuttle	(S.N. —442013)
5420	SyncShuttle 2SP	(S.N. —445000)
5420	PowerRev	(S.N. —446001)
5420	PowerRev 2SP	(S.N. —449000)
5520	Collarshift	(S.N. —450000)
5520	SyncShuttle	(S.N. —452004)
5520	SyncShuttle 2SP	(S.N. —455000)
5520	PowerRev	(S.N. —456004)
5520	PowerRev 2SP	(S.N. —459000)

Continued on next page

OUC1080,00002DC -19-28APR05-1/4

Switch Wire Location On Key Switch

NOTE: This procedure applies to the following tractors:
 5105 (S.N. —411578), 5205 (S.N. —421446),
 5010, 5010N, 5320N (S.N. —438002), 5420N
 (S.N. —448002), 5520N (S.N. —458020) and the
 Standard Tractors on the following two charts.

5210 is part of 5010

Standard Straddle Mount Tractors		
Model	Transmission	Serial Break
5220	Collarshift	(S.N. —420000)
5220	SyncShuttle	(S.N. —422003)
5220	SyncShuttle 2SP	(S.N. —425000)
5220	PowerRev	(S.N. —426003)
5220	PowerRev 2SP	(S.N. —429000)
5320	Collarshift	(S.N. —430000)
5320	SyncShuttle	(S.N. —432003)
5320	SyncShuttle 2SP	(S.N. —435004)
5320	PowerRev	(S.N. —436000)
5320	PowerRev 2SP	(S.N. —439001)
5420	Collarshift	(S.N. —440001)
5420	SyncShuttle	(S.N. —442013)
5420	SyncShuttle 2SP	(S.N. —445000)
5420	PowerRev	(S.N. —446001)
5420	PowerRev 2SP	(S.N. —449000)
5520	Collarshift	(S.N. —450000)
5520	SyncShuttle	(S.N. —452004)
5520	SyncShuttle 2SP	(S.N. —455000)
5520	PowerRev	(S.N. —456004)
5520	PowerRev 2SP	(S.N. —459000)


Continued on next page

OUC1080,00002DC -19-28APR05-1/4


NOTE: Switching the wire location on key switch only applies to the tractors listed in the serial number break tables on pages 6 and 7 of this instruction.

1. Disconnect battery negative (—) cable.
2. Remove key switch nut (A).
3. **5005, 5010, 5010N, 5020N and 5020 Straddle Mount Tractors:** Remove key switch panel (B).
4. Disconnect key switch wiring connector (D) from key switch (C).


A—Nut
B—Key Switch Panel
C—Key Switch
D—Wiring Connector

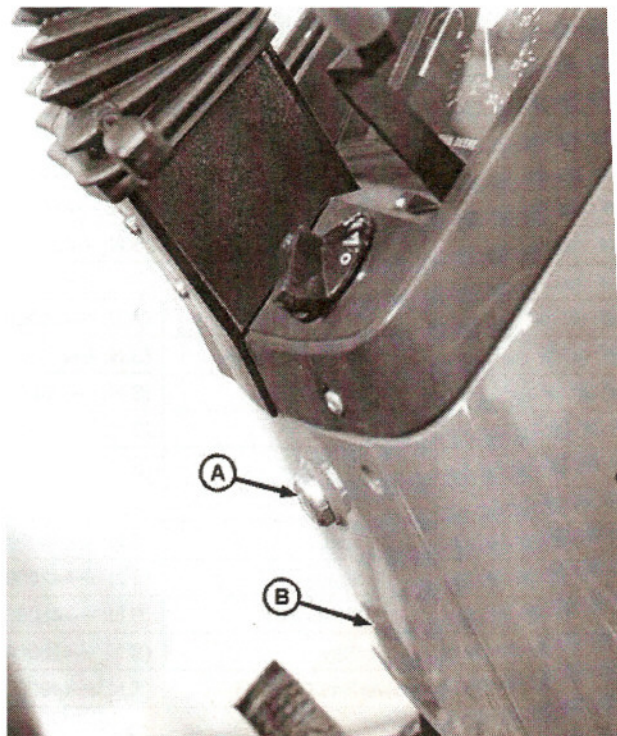

Key Switch Panel—Straddle Mount Tractors Shown

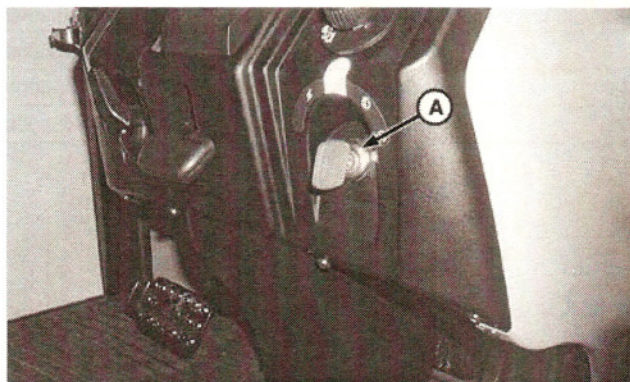

Key Switch Panel—Cab and Open Station Tractors Shown

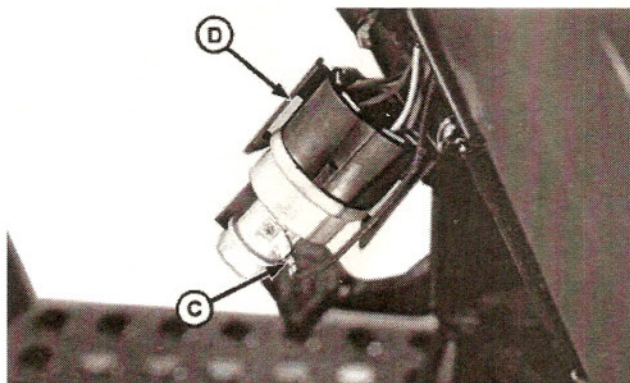

Key Switch



LV2122 —UN—15MAY97

Continued on next page

OUO1080,00002DC —19—28APR05—3/4

5. Locate and remove yellow wire #354 (B) in Pin 8 (GND) (A) on key switch wiring connector.
6. Install yellow wire #354 (B) in Pin 2 (BAT) (C) on key switch wiring connector.
7. Connect key switch wiring connector to back of key switch.
8. **5005, 5010, 5010N, 5020N and 5020 Straddle Mount Tractors:** Install key switch panel.
- 5020 Open Station and Cab Tractors:** Install right side panel.
9. Install key switch nut.
10. Connect battery negative (—) cable.

A—Pin 8 (GND)
 B—Yellow Wire #354
 C—Pin 2 (BAT)

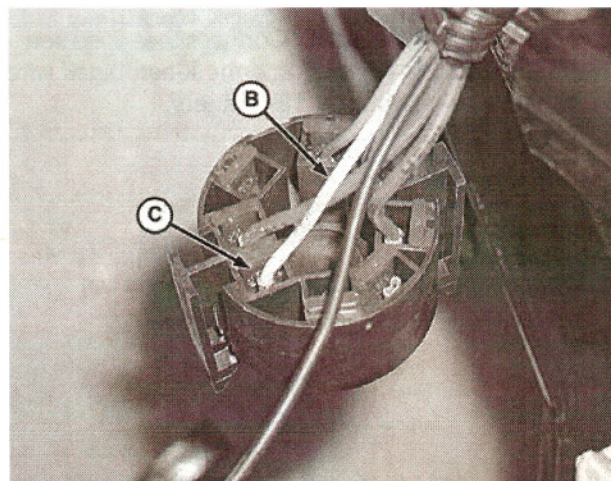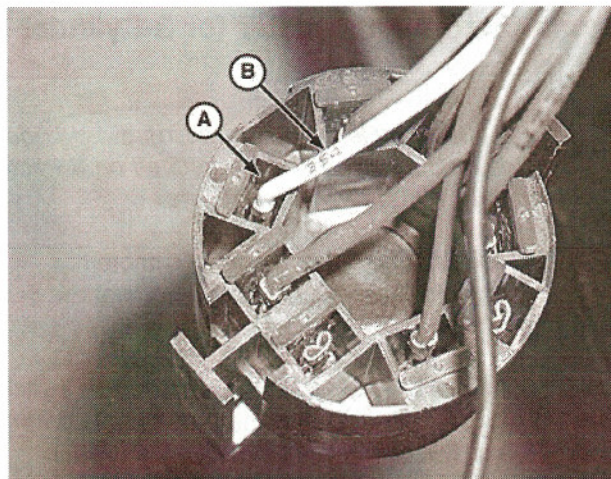

OUO1080,00002DC -19-28APF