


MAIN RELIEF VALVE (CONT'D)

Testing And Adjusting The Main Relief Valve (Cont'd)

For Machines Equipped With Joystick And Without Rear Auxiliary Hydraulics

NOTE: If the machine is equipped with the loader [Figure 20-20-7] and [Figure 20-20-8] are not performed. Disconnect the hydraulic hoses from the loader to the valve.

Figure 20-20-7

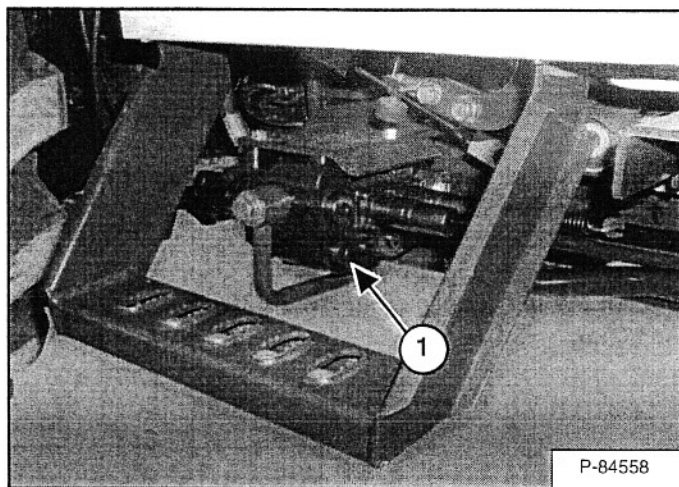


Remove the plug (Item 1) [Figure 20-20-7] from the boom down port.

IMPORTANT

When repairing hydrostatic and hydraulic systems, clean the work area before disassembly and keep all parts clean. Always use caps and plugs on hoses, tubelines and ports to keep dirt out. Dirt can quickly damage the system.


I-2003-0888

Figure 20-20-8

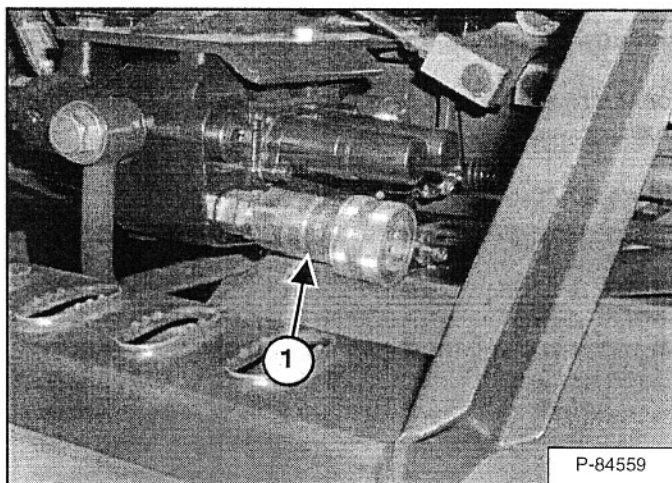

Install the loader female quick coupler (Item 1) [Figure 20-20-8] in the port.

Figure 20-20-9

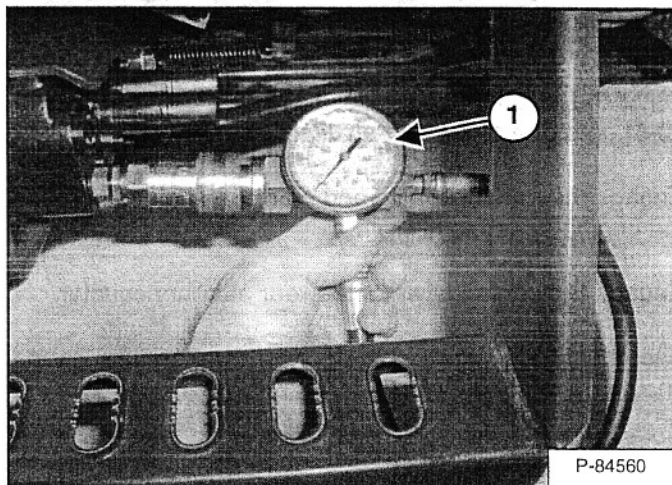

Install the loader male quick coupler on the test gauge / hose assembly. Connect the gauge / hose assembly (Item 1) [Figure 20-20-9] to the valve.

Engage the parking brake and start the engine. Increase the engine speed to full rpm.

Move the joystick lever to the boom down position (forward as viewed from the operators seat). Do NOT engage the float position.

The main relief valve pressure shown on the gauge should be 17651 kPa (177 bar) (2560 psi).

If adjustment is needed, move the joystick lever to the neutral position, decrease engine speed to low rpm and stop the engine.