


## MAINTENANCE


### Auger Repositioning (Figure 10)

After shear bolt breakage on one of the augers, make sure to reposition the augers as shown on the figure below

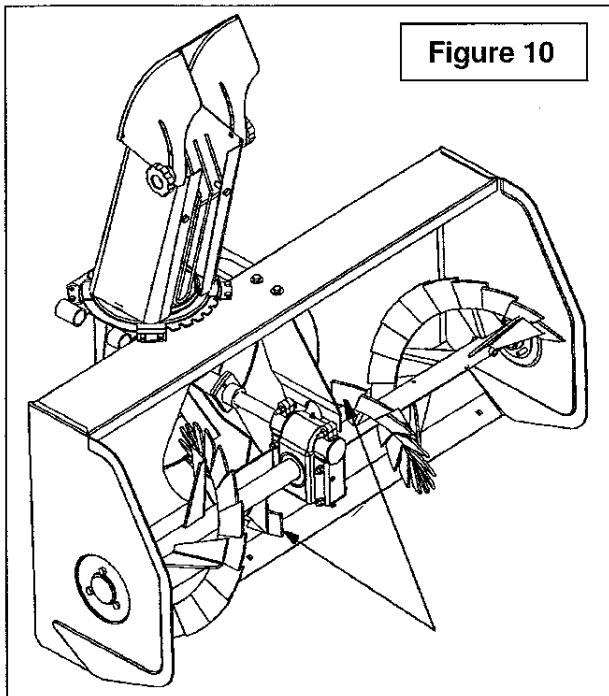

### Drive Chain Tension Adjustment (Figure 11)

Remove the driveline guard. Loosen the four bolts securing the reduction box to the snowblower. Tighten the chain in order to leave approximately 1/4" deflection. Tighten the four bolts securing reduction box to the snowblower and reinstall the driveline guard.

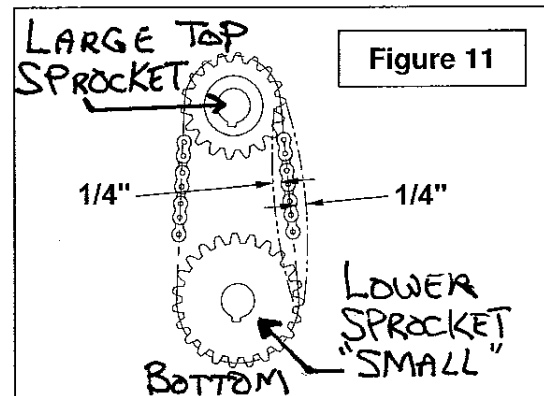

## LUBRICATION

Use a good grease gun and lubricate as follows:

DESCRIPTION	INTERVAL	LUBRICATION REQUIRED
Driveline	8 hours	Grease each universal joint
	24 hours	Separate the sliding parts and cover each one of them with grease
Driving chain	4 hours and after each operation	Lubricate with chain saw lubricant
Auger	24 hours of operation or once a year whichever comes first	Grease fitting on each auger section
Gearbox	every month	Check oil level. If needed, add AGMA 5EP extreme pressure oil, SAE 80W90 gear oil or equivalent.