

MOUNTING INSTRUCTION

EKO



Manufactured:
OFA Oy Ab
Hirvikoskentie 128
FI-32200 LOIMAA
FINLAND


Tel: +385 207 927 500
Fax: +358 207 927 501

E-mail: info@ofa.fi
www.ofa.fi

1. Put the chains behind the tire the fasteners against the tractor and studs facing up.



2. Fasten the rope in the middle of the chain.

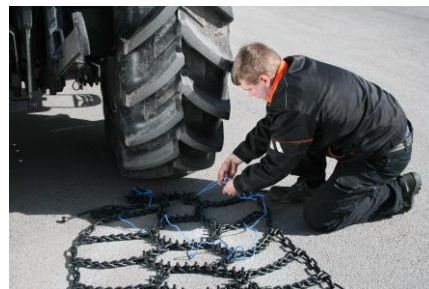

3. Put the rope on the top of the tire.



4. Drive forward one tire circuit and keep the chain as narrow as possible.



5. When the chain ends meet, connect the chain with slanted gap links. (Remove excess links)



6. Fasten the chain with the fasteners inside first and then outside.



7. A good rule is that your hand should fit between the tire and the side chain. Do not tension too tight. Check tightness of the shackles. Check the tension of the chain after a short test drive. Tighten the chain if necessary.

