
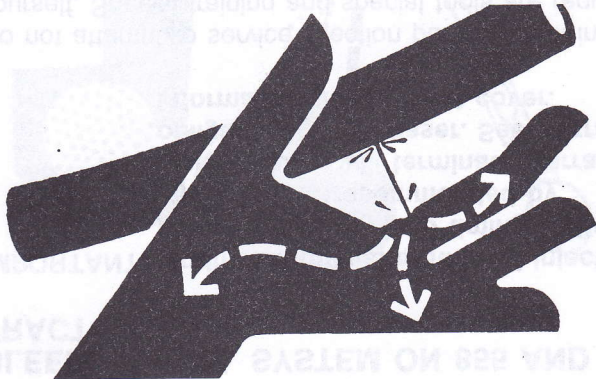


CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

8. While holding each bottom injector nozzle nut in place, loosen three top nuts (A) using a 17mm wrench.
9. Turn key to START position.
10. When fuel appears at injectors, tighten top injector nozzle nuts while holding bottom nuts in place.
11. START engine. If engine does not start or runs rough for more than 30 seconds, see your John Deere dealer.

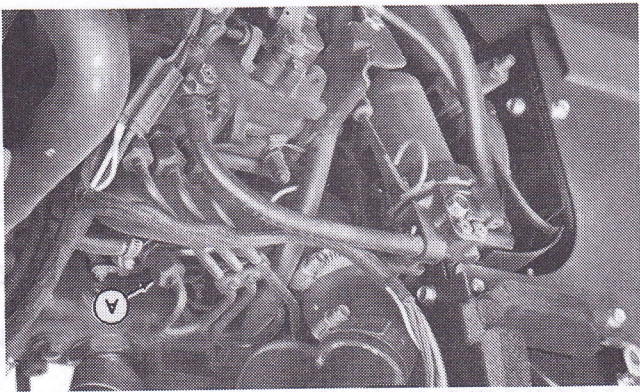

MX,SEV,CO -19-17JUL90

M40537

-JN-30AUG88

X9811

-JN-23AUG88